





*Fertilize Responsibly™*

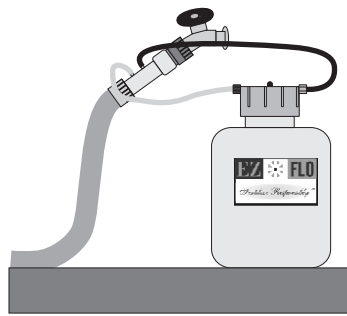

**Hose/Drip Connection**

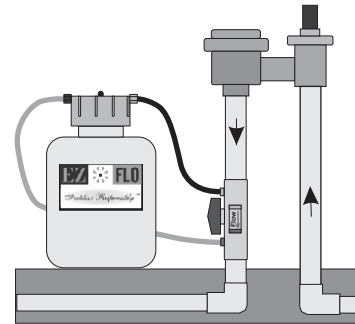

**Optional Sprinkler/Drip Connection**

Use an EZ Ball Valve Coupling Connector for low flow drip

### EZ 2013-HB Features

**Tank Capacity - Liquid:**  
**Tank Capacity - Water Soluble Fertilizer:**  
**Minimum Flow Requirements:**  
**Adjustable Feed Ratio Range:**  
**Water Volume to Empty Tank:**

Approx. 1.33 Gal. (5.0 liters)  
Recommended 8 lbs. (3.63 kg)  
2.5 gallons/hour (9.5 liters/hr.)  
1,000:1/Slow setting to 100:1/Fast setting  
1,330 gal (5.03 kl)/Slow setting  
133 gal (0.50 kl)/Fast setting  
7" x 7" x 12" (18cm x 18cm x 30.5cm)  
3 lbs. (1.36 kg)

**Dimensions (LWH):**  
**Approx. Weight:**

***EZ Ball Valve Coupling Connector Required for in-Line Low Flow Drip Installations.***

**Suggested Landscape Coverage under normal watering conditions\*:**

**100%** turf  
**75%** turf/**25%** trees/shrubs/flowers  
**50%** turf/**50%** trees/shrubs/flowers

Up to 5,250 sq ft (487 sq m)  
Up to 6,200 sq ft (575 sq m)  
Up to 9,000 sq ft (836 sq m)

### EZ 2013-HB

**Warranty:** One (1) year under normal pressure conditions and unit must not be allowed to contain pressure when idle. Normal pressure conditions are when operating line pressures does not exceed 80 PSI (5.5 bars). See [www.ezflorfertilizing.com/warranty.asp](http://www.ezflorfertilizing.com/warranty.asp) for further information.

**Includes:**

Hose bib adapter with US Standard Threads, tubing and tubing valves. British Standard Thread Adapters available (EZ-FLO part # 3G34 and part # 3H34). Does not include suitable back flow device which must be purchased separately. Optional Low Pressure Hose Vacuum Breaker (EZ-FLO part # 3050) available.

**Optional Irrigation Line Connection:**

Must be connected after the zone valve by using an EZ-FLO Coupling Connector, EZ Ball Valve Coupling Connector (recommended for low flow conditions) or EZ-FLO Drill and Thread Conversion Kit (3/4" and smaller schedule 40 PVC pipe) installation kit. These connection options must be purchased separately.

This system connects directly to the hose bib for use with garden hose or drip watering systems. It can also be installed to support an in-ground irrigation system, **after the zone valve**, to feed through sprinklers or drip emitters, by installing it with a drill and thread conversion kit or appropriate EZ Coupling Connector. **The system should not be used under constant pressure. It must be installed on the downstream side of the hose bib or zone valve and have no contained pressure when the system is not in use.** EZ-FLO's patented flow process automatically adjusts to changes in pressure and flow without changing fittings. This system is designed for the delivery of products that are designated as organic or non-hazardous.

A code compliant back flow prevention device is required for installation. Installation must follow local and state plumbing codes. Unless otherwise specified, either an atmospheric or pressure vacuum breaker devices are the minimum back flow prevention device required according to University of Southern California - Foundation for Cross Connection Control and Hydraulic Research.